




KKT Training Series

The ECO Pump Programming



eco pump compartment overview

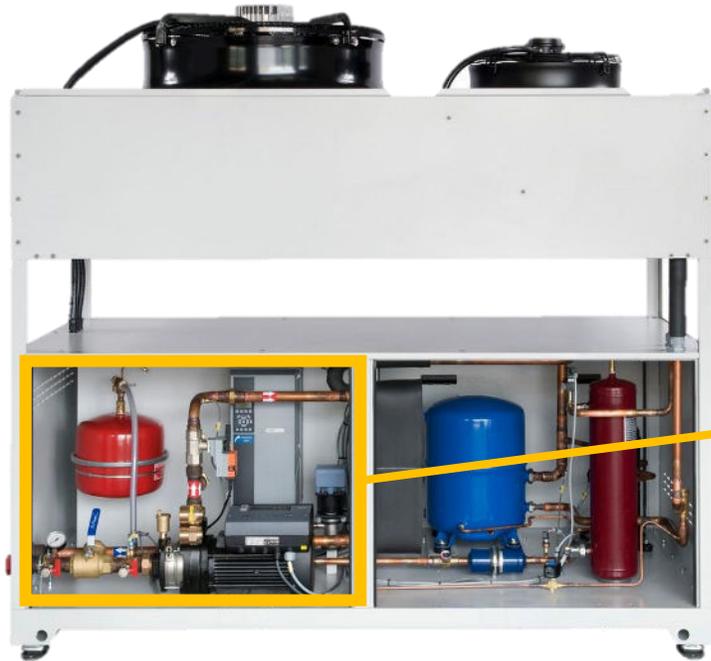

Pump Compartment



what is needed?

- Grundfos Go Bluetooth Dongle
- Grundfos Go Remote App (google play store and IOS app store download)
- Android or Apple Phone (see below for a list of supported devices)

4.3 Supported devices

Note The smart devices listed below have been tested and are supported by Grundfos GO.

Make	Model	MI 202	MI 204	MI 301
Apple	iPod touch 4G	•		•
	iPod touch 5G		•	•
	iPhone 4, 4S	•		•
	iPhone 5, 5S, 5C		•	•
	iPhone 6, 6 Plus		•	•
	iPad, iPad Mini		•	•
Asus	Nexus 7			•
	Transformer TF101			•
	Transformer TF300			•
Google	Galaxy Nexus			•
	Nexus 4			•
	Nexus 10			•
HTC	Desire S			•
	One S			•
Motorola	Sensation			•
	Xoom2			•
	Moto X (XT1053)			•
Samsung	Galaxy S II			•
	Galaxy S III			•
	Galaxy tab 2 7.0			•
	Xperia Arc			•
Sony	Xperia Arc S			•
	Xperia Tipo			•
	Xperia V			•

Note: Similar Android and IOS-based devices may work as well, but have not been tested by Grundfos.



before programming

- Connect Dongle via Bluetooth connection
- Connect Dongle to Grundfos CME 10-3 Pump




connect Dongle via Bluetooth connection

Power On Grundfos Go Dongle


Note: Please charge before use!




Pair Grundfos Dongle to Android/iphone via Bluetooth settings.

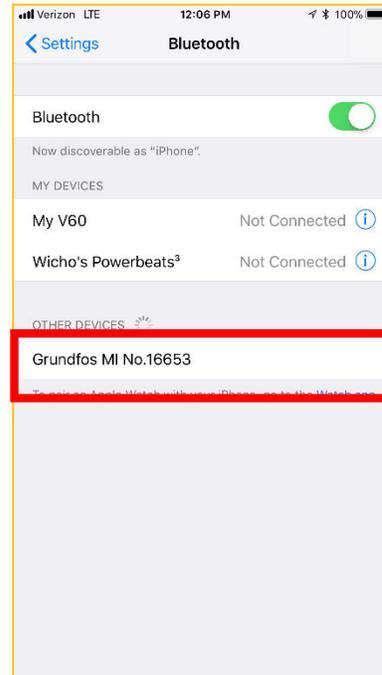

Find

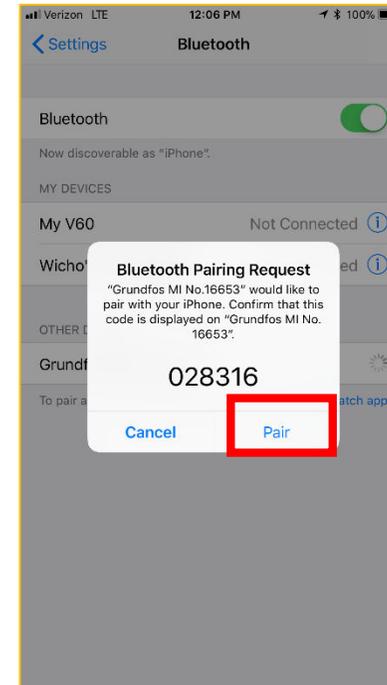

Pair

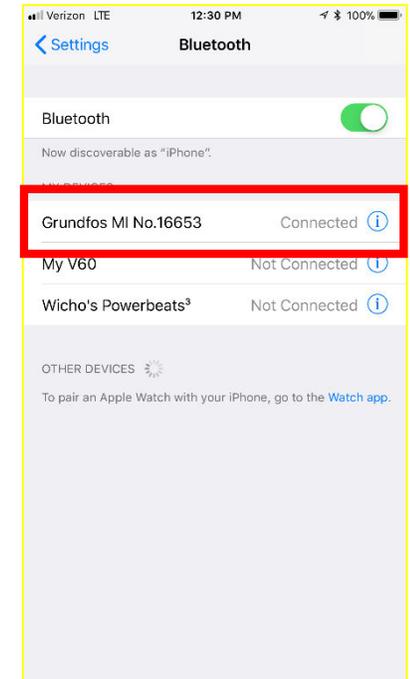

Connected

connect Dongle to Grundfos CME 10-3 Pump


IR on Grundfos Go Dongle must point towards IR Receiver port on the Grundfos CME 10-3.





connect Dongle to Grundfos CME 10-3 Pump



Connect Grundfos Dongle to Grundfos CME 10-3 via Grundfos Go Remote App.

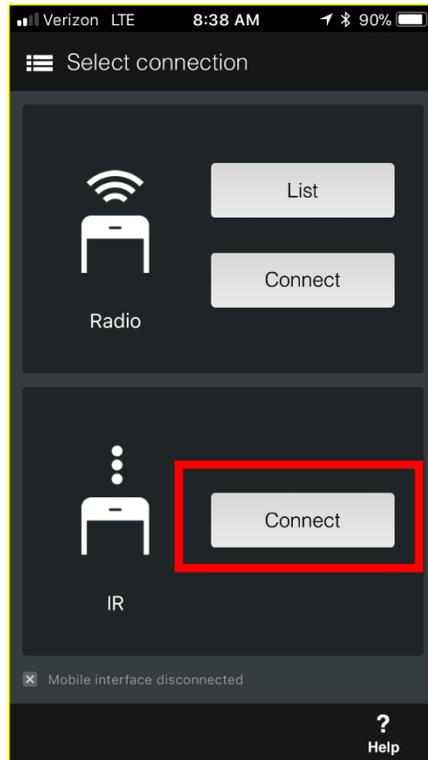


Connect

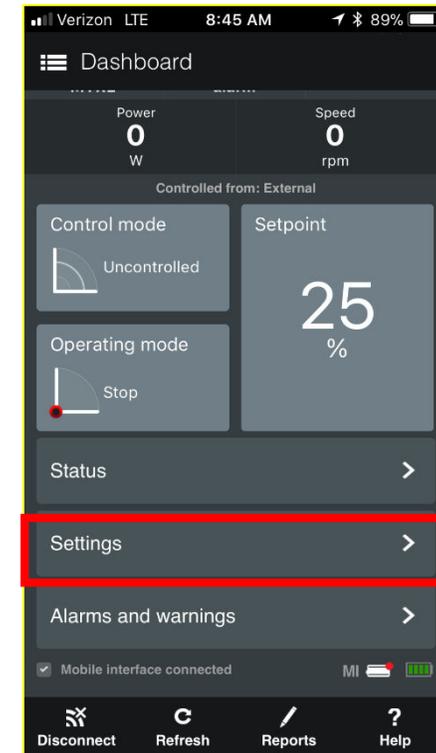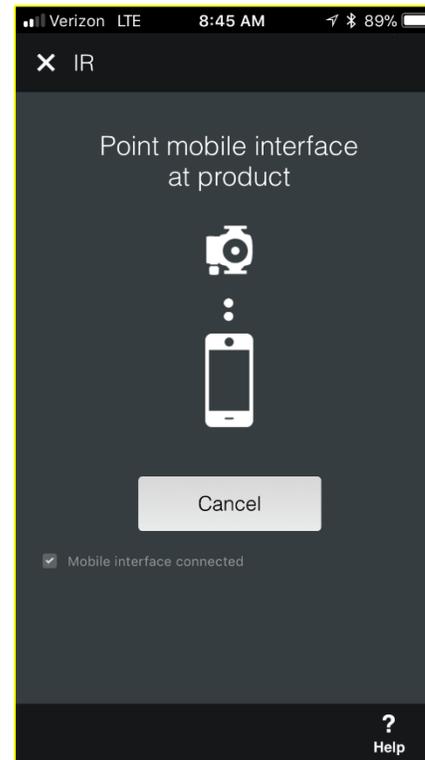

Program

programming the Grundfos CME 10-3

Through the “Settings” tab, we will check the factory parameters.

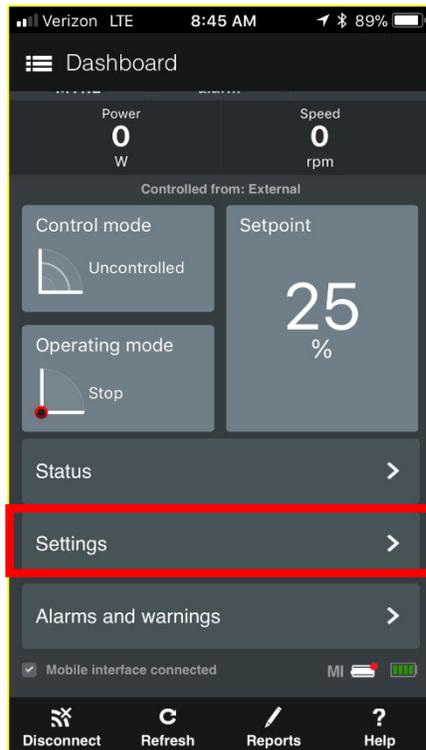

Program

Parameter	Old Pump Setting (black/grey style)	New Pump Setting (red/black style)
Set Point	100%	100%
Mode of Operation	Normal	Normal
Control Mode	Uncontrolled	Constant Curve
Controller	KP 0.5/I 0.5	KP 0.5/ Ti 0.5
External Set Point	0-10 V	0-10 V = 0-100%
Signal Relay Activated During	Ready	Ready
Buttons on Pump Number	Disbaled/Not Activated --	Disbaled/Not Activated 1
Digital Input	Ext Failure	Ext. Stop
Stop Function	Disbaled/Not Activated	Disbaled/Not Activated
Sensor Type	--	--
Operating Range	Min 25 %, Max 100%	Min 25 %, Max 100%
External Set Point-Function		Linear

